

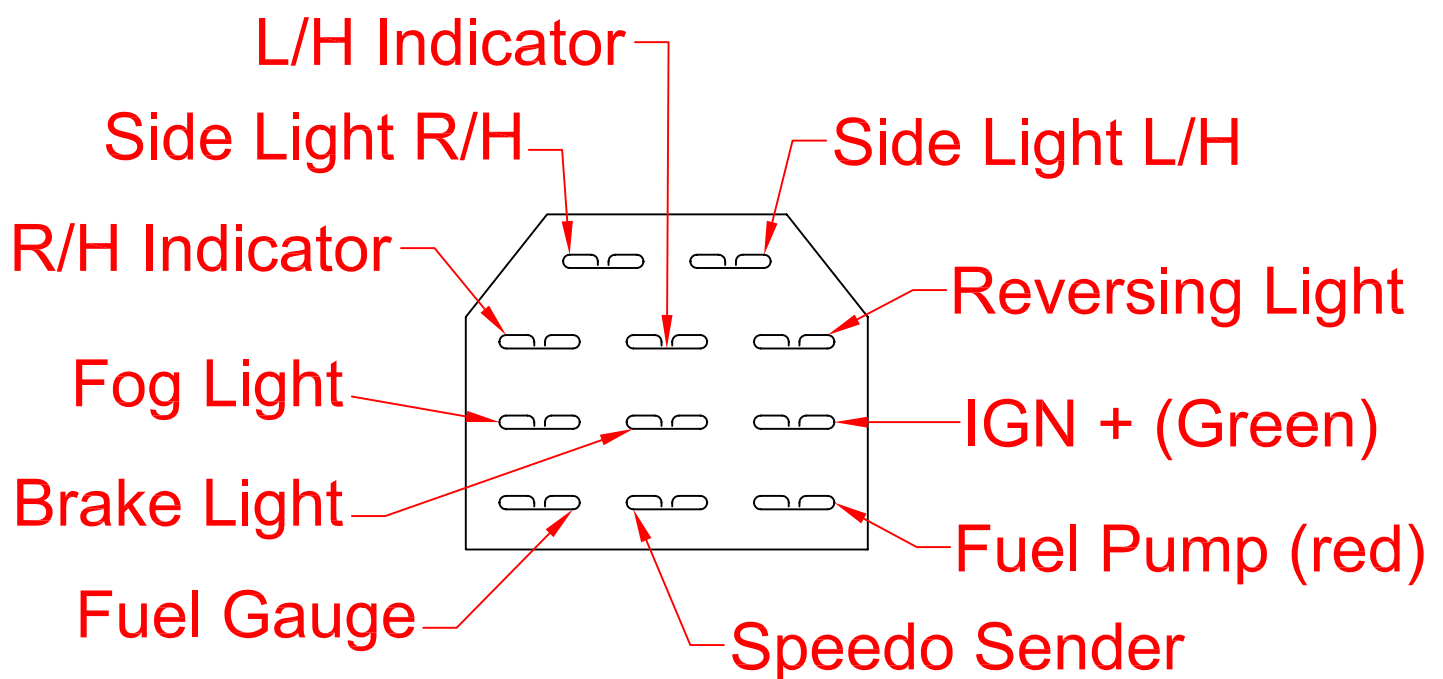


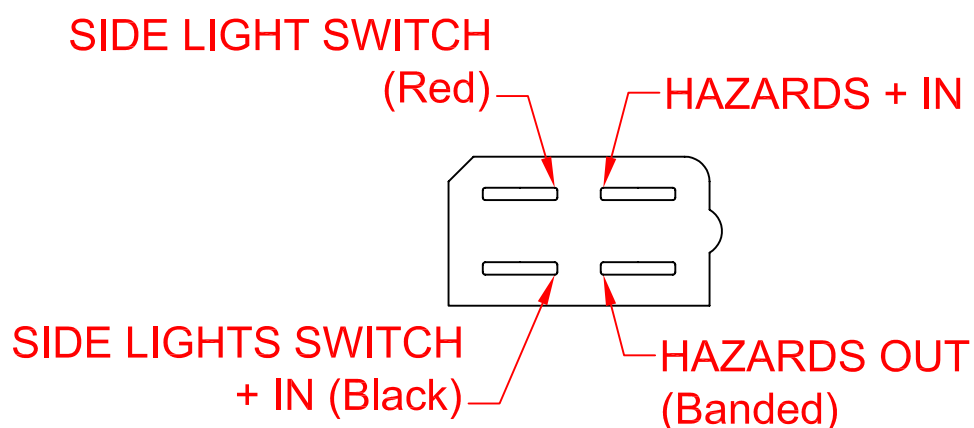


Rear Loom section conector
main loom plug

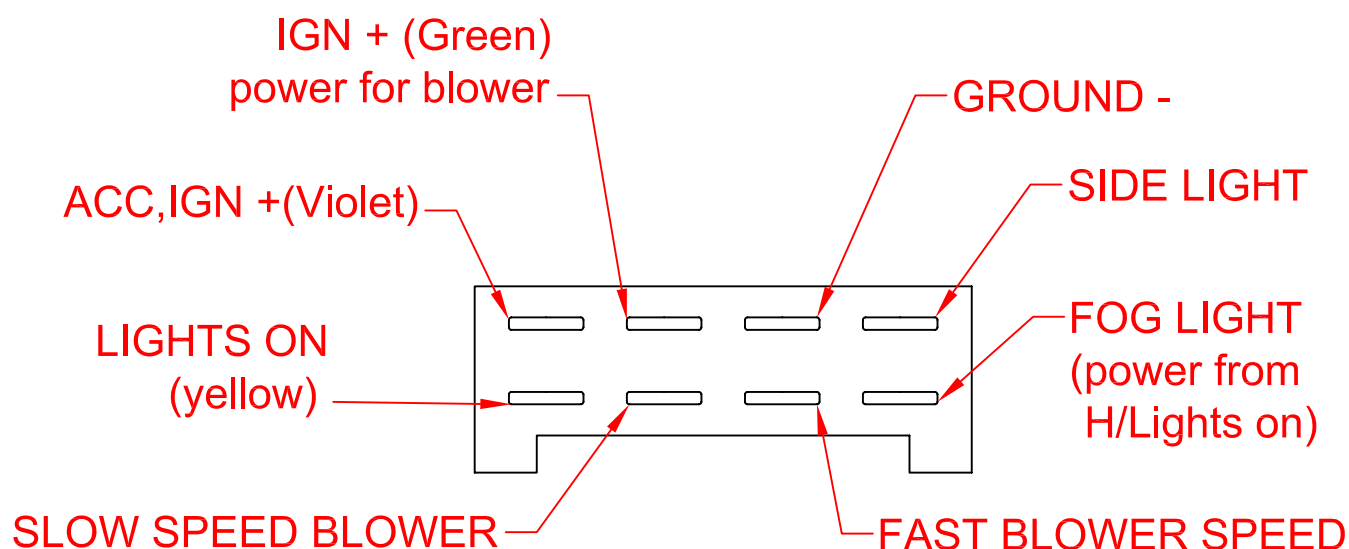


SWITCH SOCKETS

LOOKING ON ENDS

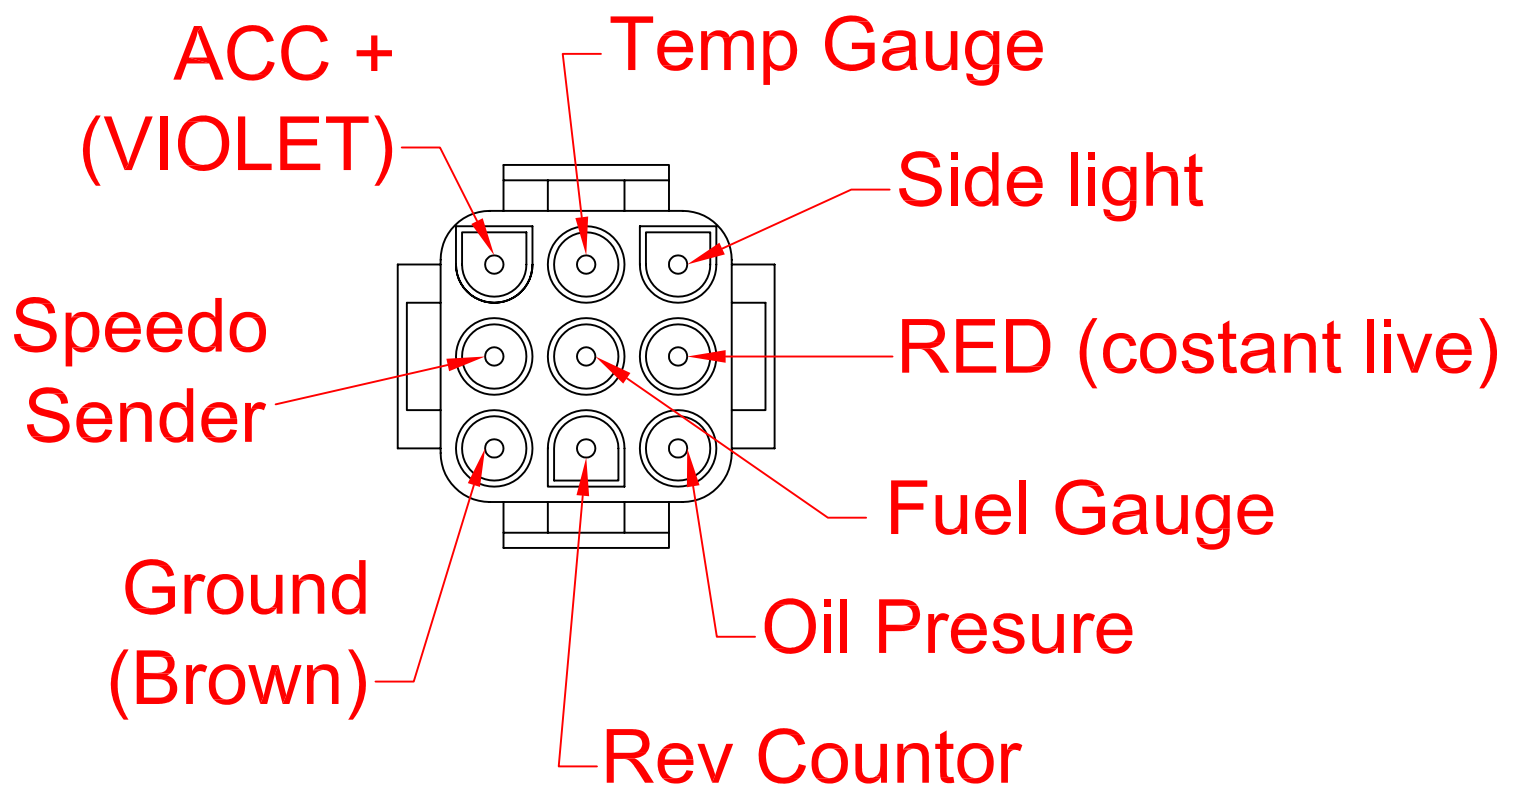


Gauge / clocks conector

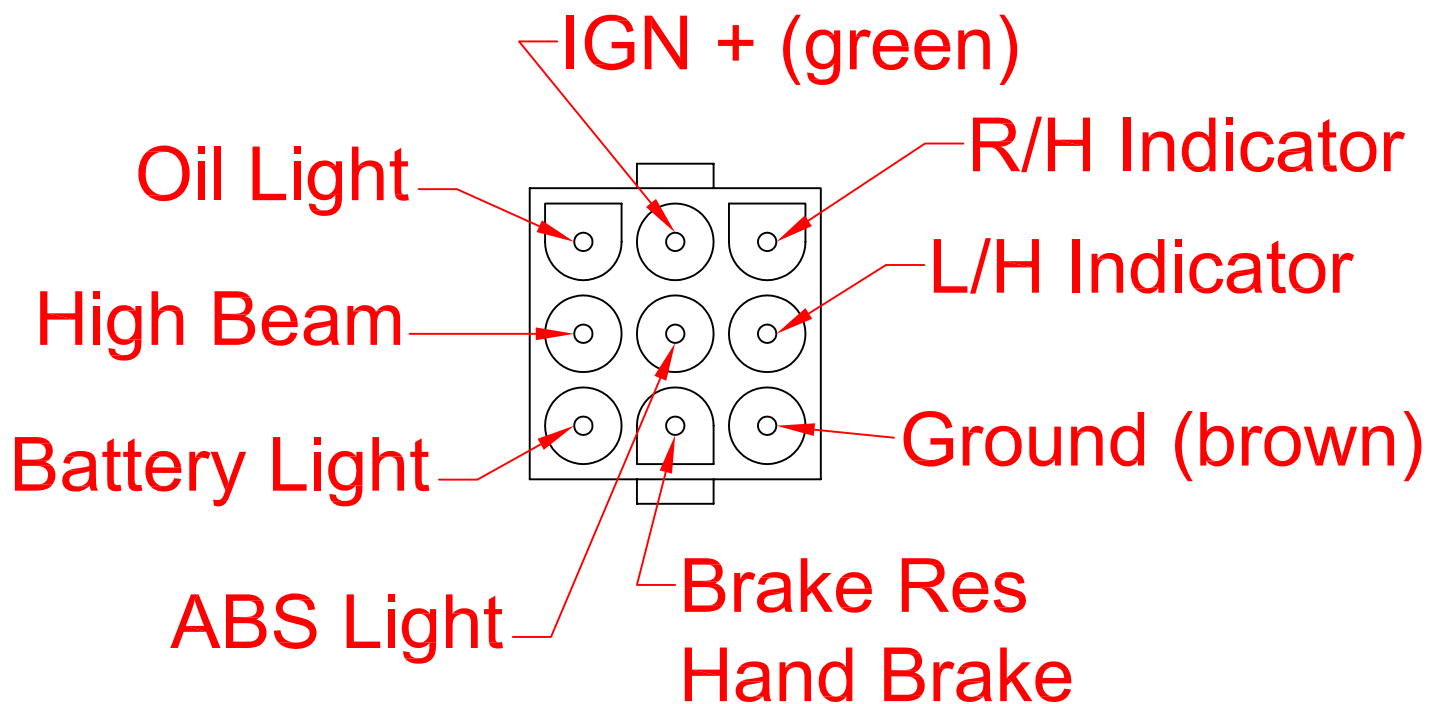


Warning Light conector

ABS

SOCKET

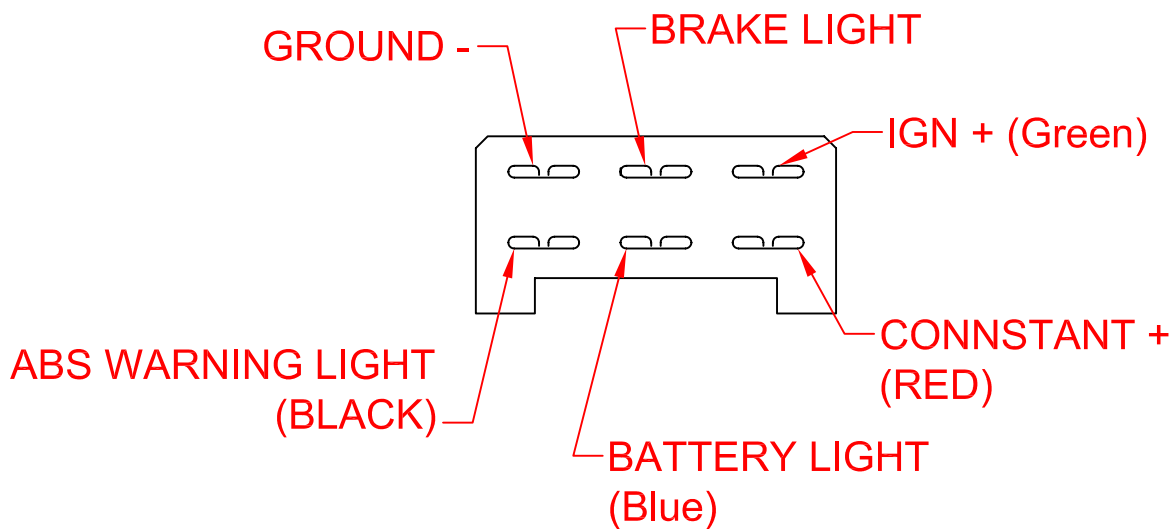


ALL THE BM's WIRING COLOURS
ARE IN BUILD MANUAL ABS SECTION

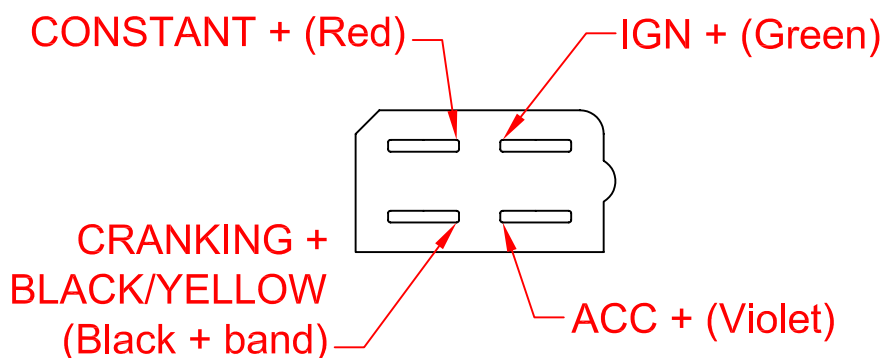


IGNITION

SOCKET

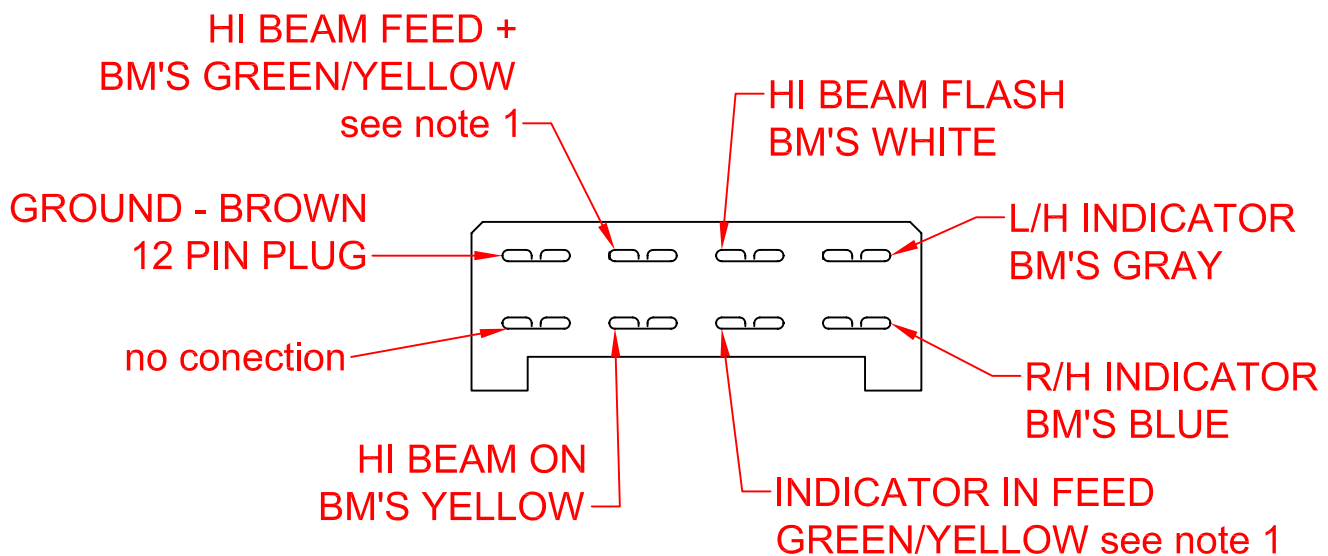


Note 1 : Because of the Bm's parking light set up the two Green/Yellow wires need to be separated and test the wires to find the one that contacts with the R/H & L/H indicator when switched, this one is connected to the indicator in pin. the other wire is to the HI Beam feed.

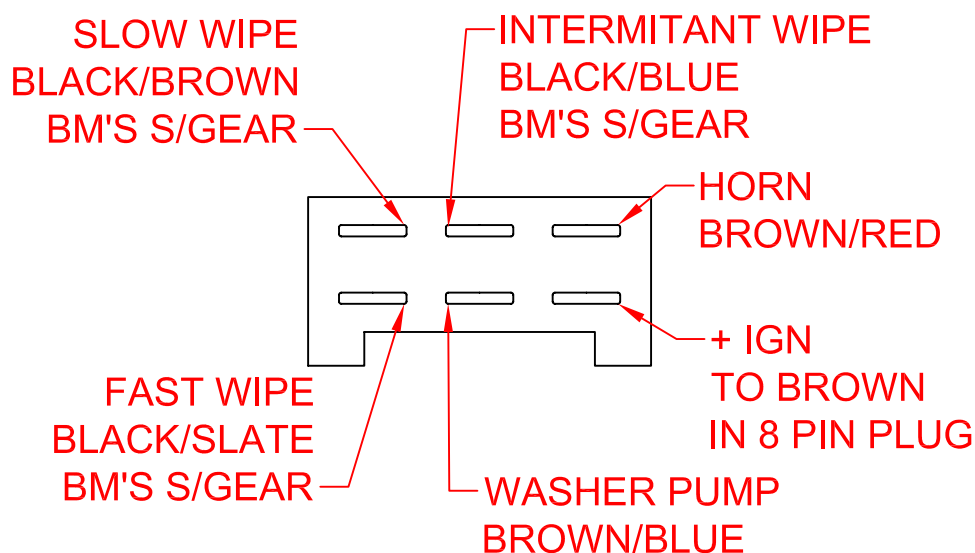


WIPER & LIGHTS / INDICATORS SOCKETS


Hi / Low beam relay

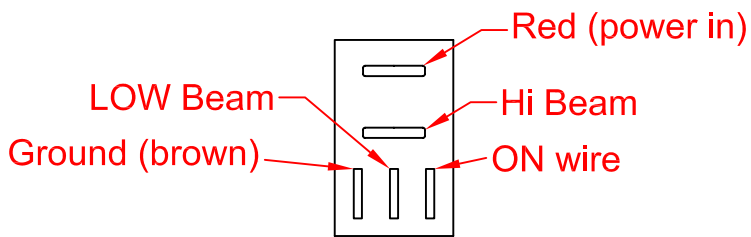


Lights ON relay

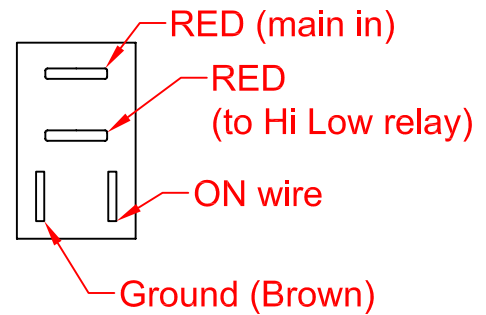


Wiper ON relay

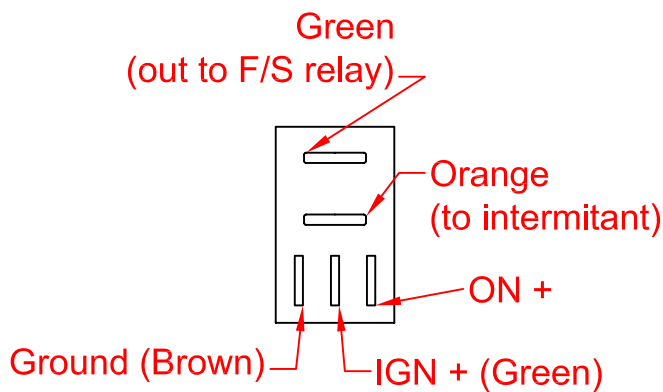


Fast / Slow relay

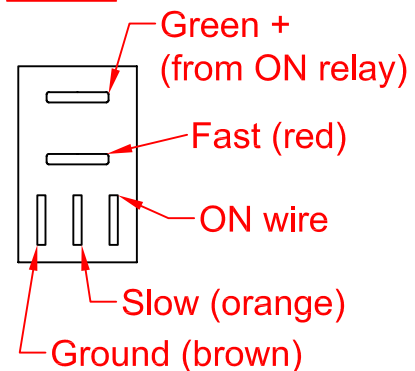


Washer pump relay

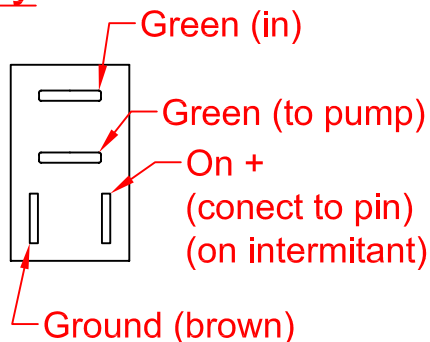

Horn Relay

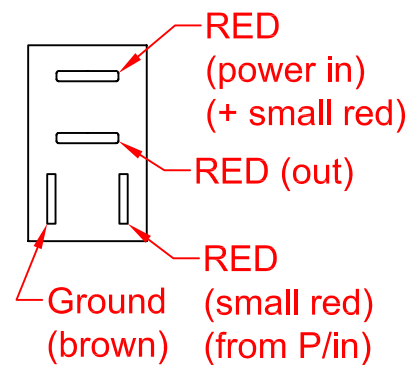

Fan Relay

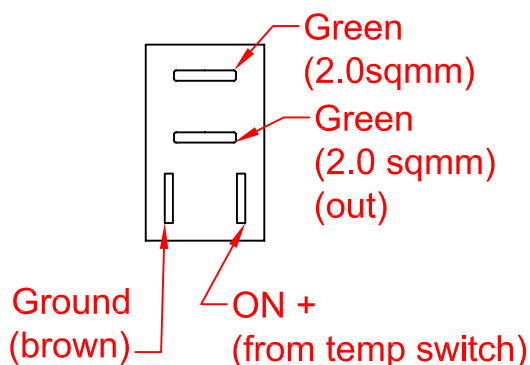

fuel pump relay

